



## Product Data Sheet

Startér pro zářivky elektronický

**FLT-STARTER-0005 4-  
180W 180-250V**

Order number

**190004000**

Unit EAN13 code

**8595209974075**



### Exclusion of liability

Changes to data are subject to prior notice. NBB Bohemia s.r.o. accepts no responsibility for damages caused by inaccurate interpretation of the content on this site.

### Warning

If broken in a closed room, we recommend ventilation to reduce the mercury vapor concentration. Use protective equipment while working. Immediately remove the shards so that they do not get injured. After removing the shards, use the technical means for decontamination of mercury. For this purpose we supply decontamination kits, which you can order by phone or in our internet shop. The decontamination kit should not be missed especially in plants where there is a danger of breaking light sources containing mercury, such as stores, warehouses, but can also be used in households. In case of nausea, give first aid and call a physician.

### Notice

Fluorescent tubes of all types require a corresponding type of ballast to operate. A suitable ballast type can be found in the detail of the item (additional products). The quality and type of the ballast greatly affect the life of the fluorescent lamp. NBB Bohemia is not responsible for shortening lamp life when the fluorescent lamp is connected to a ballast type that NBB Bohemia s.r.o. because in such a case we can not guarantee the suitability of using the ballast to the supplied fluorescent tube. When directly connected to the mains voltage without using the ballast, the fluorescent lamp will be destroyed. Fluorescent tubes are not suitable for connection to motion sensors or for connection to frequent switching devices. Frequent switching causes shortening of lamp life. Frequent switching is considered to switch the fluorescent lamp to an interval of less than 20 minutes.

### Popis